

NOTES:

1. DETAILS TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATIONS CONTAINING REQUIREMENTS FOR NAILERS, INSULATION, SLIPSHEETS, ETC.


2. PVC EDGE SEALANT IS REQUIRED ON ALL CUT OR NON-ENCAPSULATED EDGES OF REINFORCED MEMBRANE. THIS INCLUDES FACTORY CUT MEMBRANE.

3. FLASHING MEMBRANE FASTENED APPROXIMATELY 12" ON CENTER UNDER COUNTERFLASHING. IF FASTENER PENETRATES METAL COUNTERFLASHING, USE NEOPRENE WASHER OR APPLY WATER CUT-OFF MASTIC UNDER COUNTERFLASHING OR CAULK FASTENER HEAD.


4. FOR CORNER FLASHING, REFER TO APPLICABLE MULE-HIDE DETAIL MHP-180 OR MHP-181.

5. REFER TO MULE-HIDE UPLIFT RATINGS FOR APPROPRIATE BARBED SEAM PLATE DIAMETER, FASTENER SIZE, AND SPACING.

USE ONE CONTINUOUS SHEET OF REINFORCED PVC MEMBRANE TO WRAP AROUND CURB OR FORM FROM PVC COATED METAL

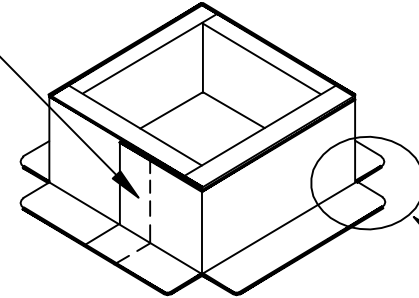

INSTALL PVC UNIVERSAL OUTSIDE CORNERS PER M-H DETAIL MHP-180 OR MHP-181

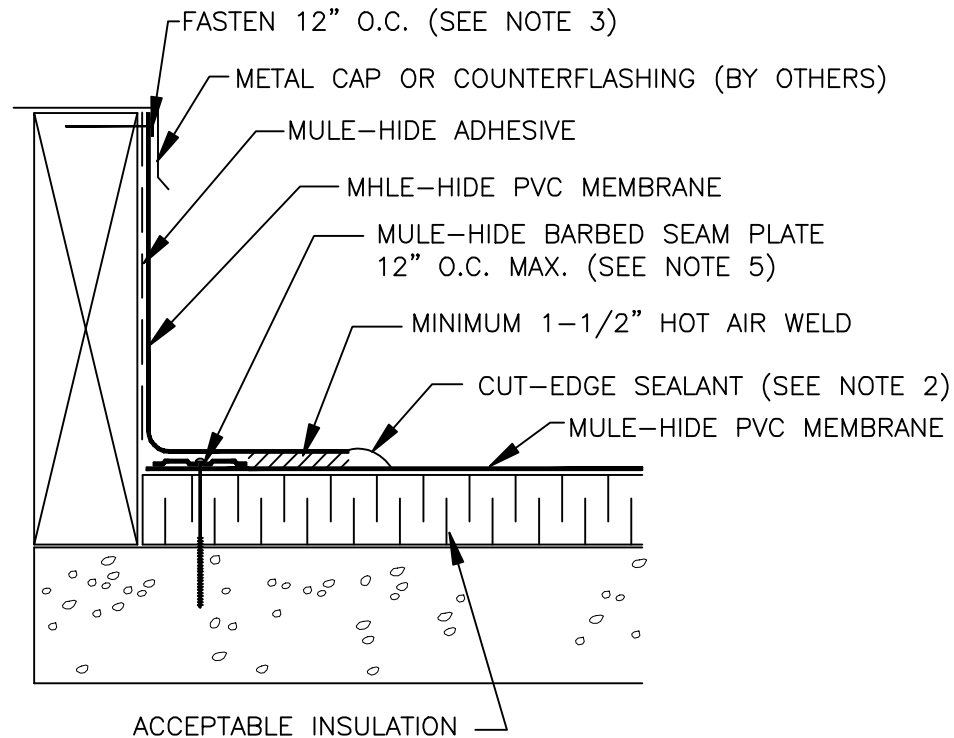

**MULE-HIDE
PRODUCTS CO., INC.
04/01/2007**

**CURB FLASHING
SYSTEMS:
ALL PVC**

**DETAIL NO:
MHP-122**