


① POSITION SHEETS AND HOT AIR WELD THE .080 INCH THICK TPO MEMBRANE A MINIMUM OF 1-1/2 (40 mm) INCHES.

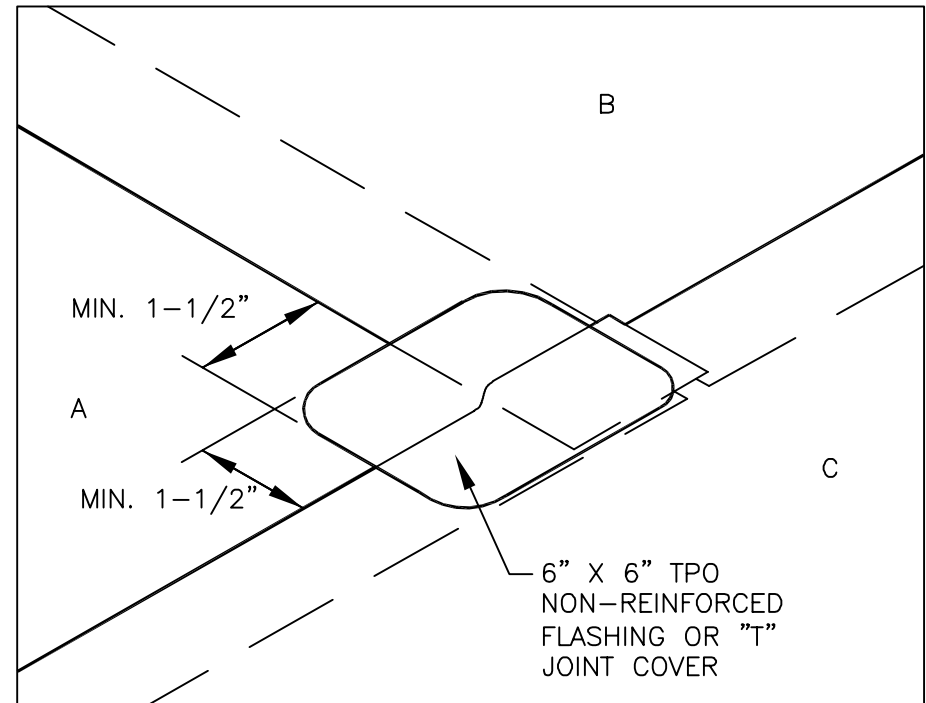

② INSTALL A 6" X 6" (150 mm x 150 mm) SECTION OF TPO NON-REINFORCED FLASHING CENTERED OVER THE SEAM INTERSECTION ("T-JOINT") AS SHOWN.

NOTE: "T-JOINT" PATCHES (COVERS) ARE REQUIRED FOR .080" THICK MEMBRANES AND 20-YEAR SYSTEM WARRANTIES

**MULE-HIDE  
PRODUCTS CO., INC.**  
2009

**"T" JOINT COVER**

**SYSTEMS:  
TPO  
FULLY ADHERED**

**DETAIL NO.:**

**MHT-FA-105C**