NOTES:

1. REFER TO SPECIFICATION FOR ACCEPTABLE MULE-HIDE FASTENERS AND PLATES.

2. REFER TO MULE-HIDE'S EPDM SPECIFICATIONS FOR SURFACE PREPARATION PROCEDURES FOR EXISTING MEMBRANE.

3. PRIOR TO SEAMING APPLICATION, USE WEATHERED MEMBRANE CLEANER TO PREPARE SURFACES OF TPO AND CLEANED EPDM OR HYPALON MEMBRANES.

4. A MINIMUM 1-1/2" (40 mm) HOT AIR WELD MAY BE PROVIDED IN LIEU OF SPLICING CEMENT (USE CUT-EDGE SEALANT IN LIEU OF ALL-PURPOSE SEALANT).

5. MULE-HIDE TAPE PRIMER MUST BE USED TO PREPARE MEMBRANE SURFACES PRIOR TO APPLYING MULE-HIDE SPLICE ADHESIVE, COVER TAPE AND ALL-PURPOSE SEALANT.

6. MULE-HIDE TPO PS COVER STRIP (12" WIDE) MAY BE SUBSTITUTED FOR THE TPO REINFORCED MEMBRANE AND MULE-HIDE SPLICE ADHESIVE.

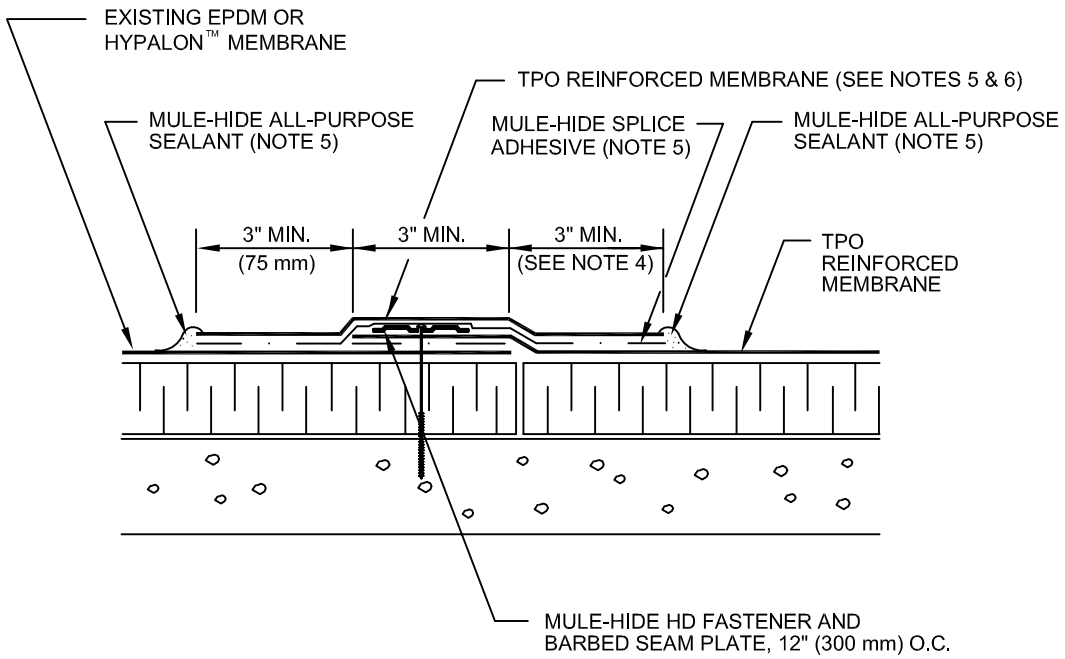

MULE-HIDE PRODUCTS CO., INC. 2006	TIE-IN - EXISTING EPDM OR HYPALON	DETAIL NO.:
	TPO SYSTEMS: ALL	MHT-UN-610C